

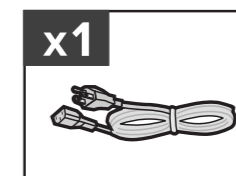


Xerox® C2432

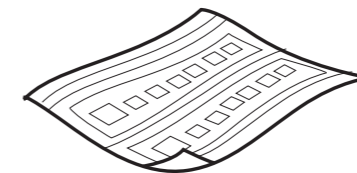


www.xerox.com/C2432EasyAssistApp

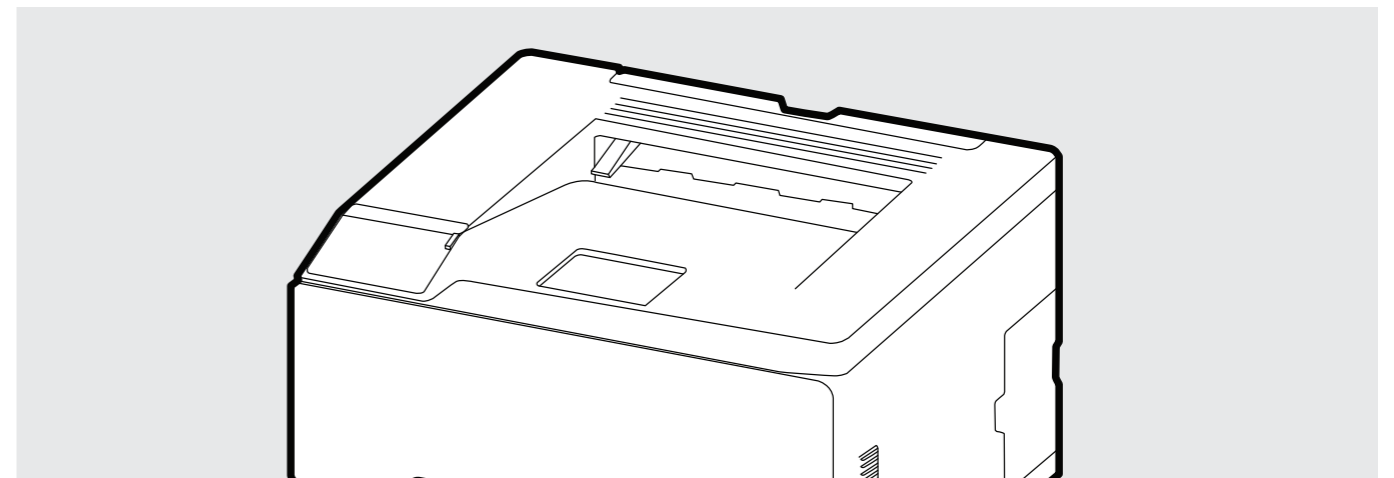


www.xerox.com/C2432EasyAssistApp




1

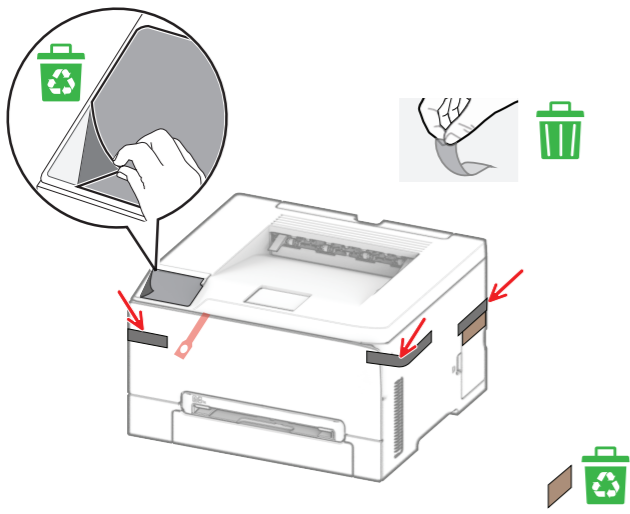


2

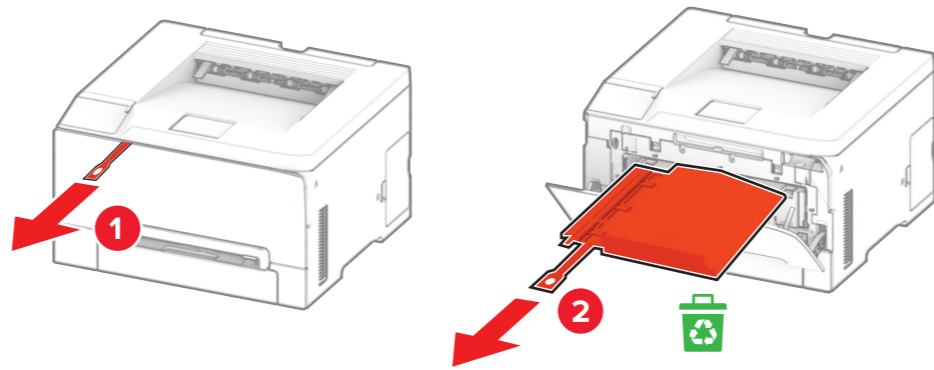


3

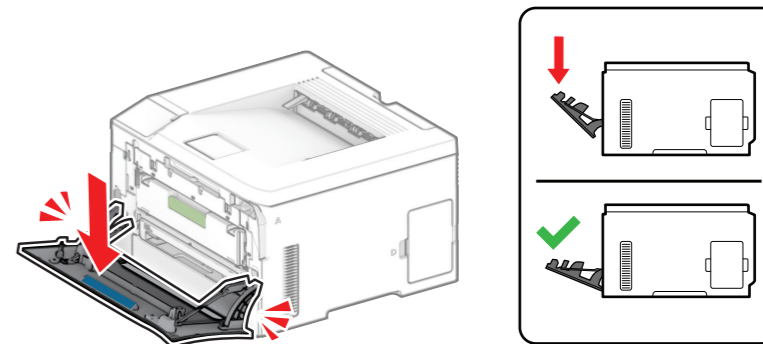


4

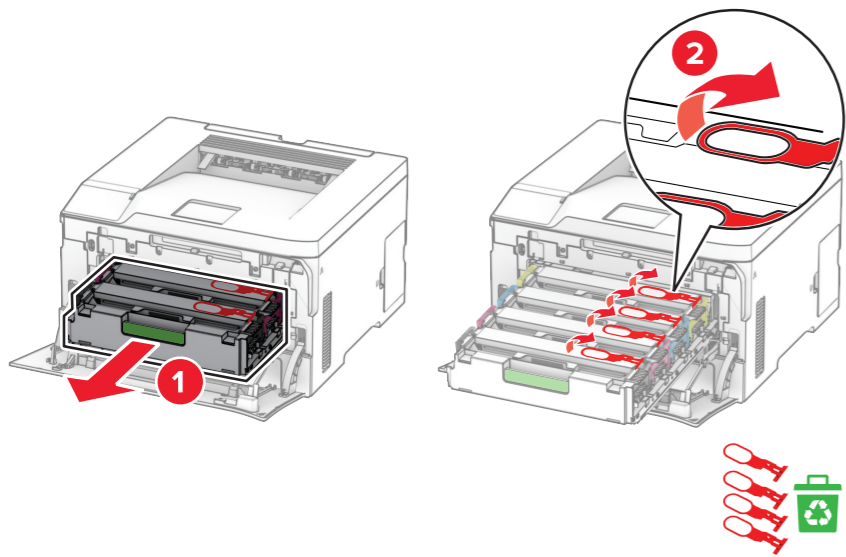


5

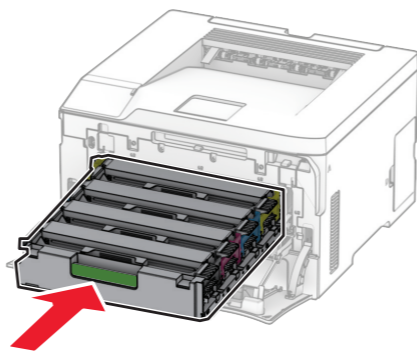


6

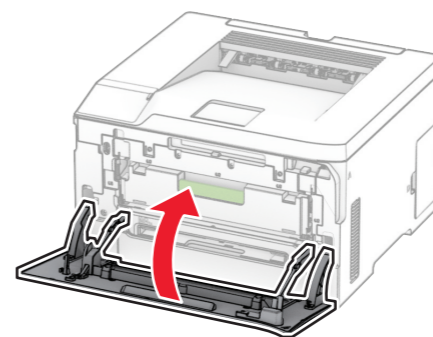


7

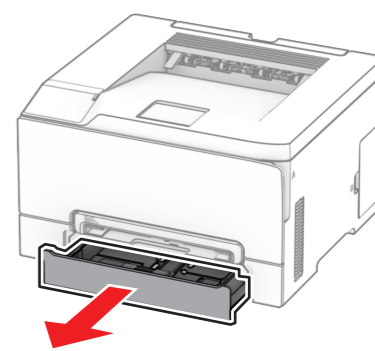


8

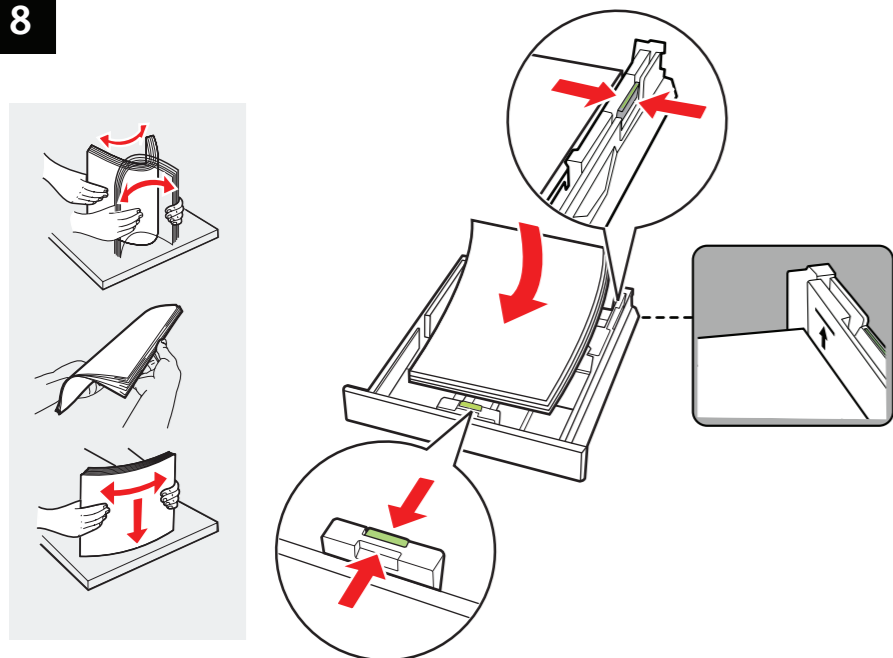

9

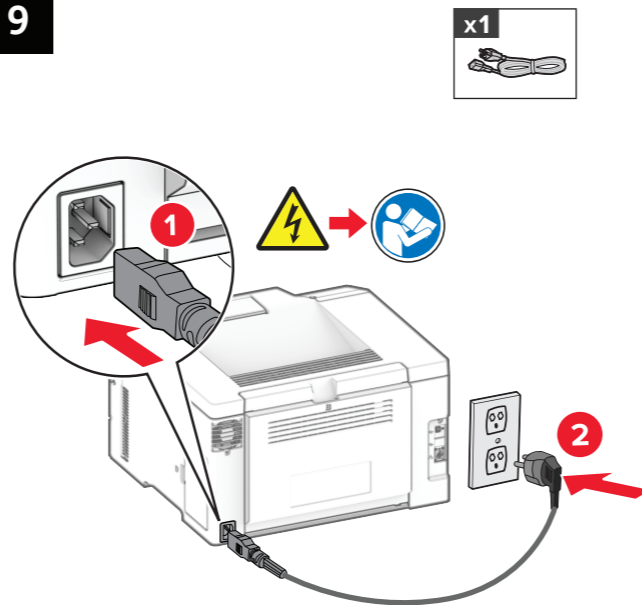

10

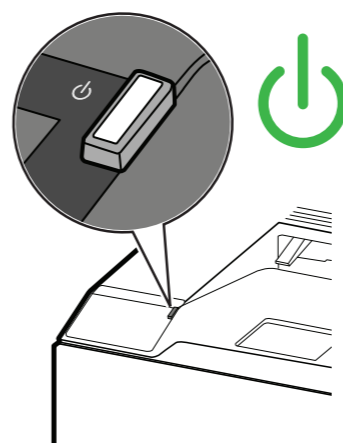

11

