




10

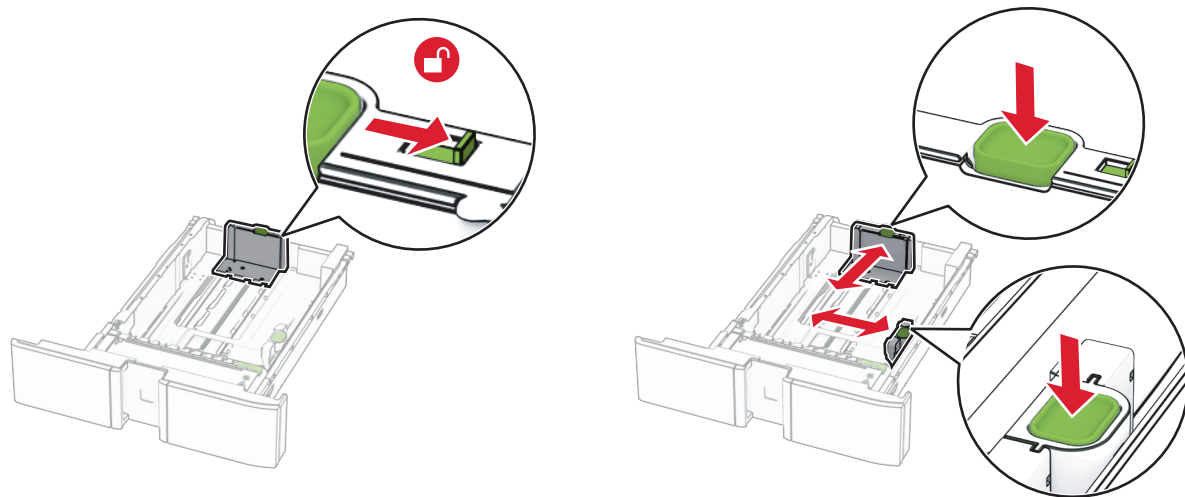


11

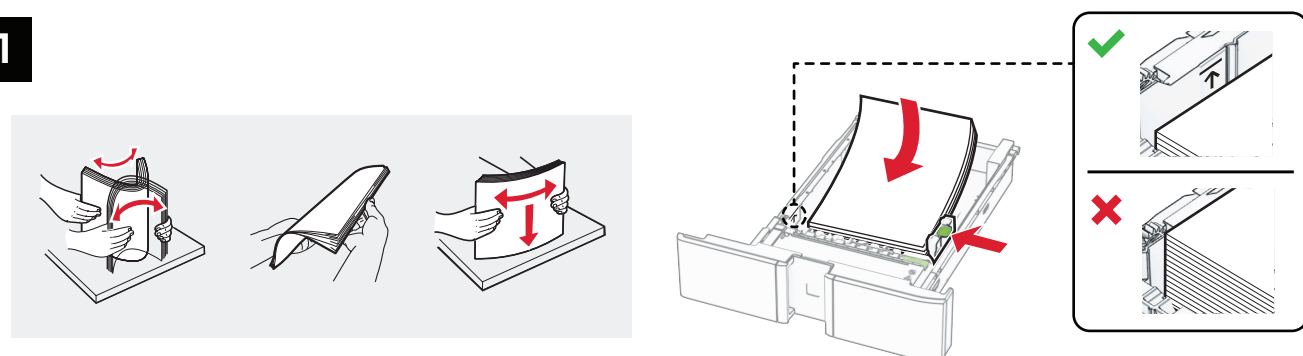


12

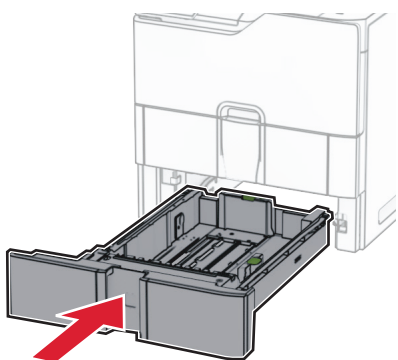


13

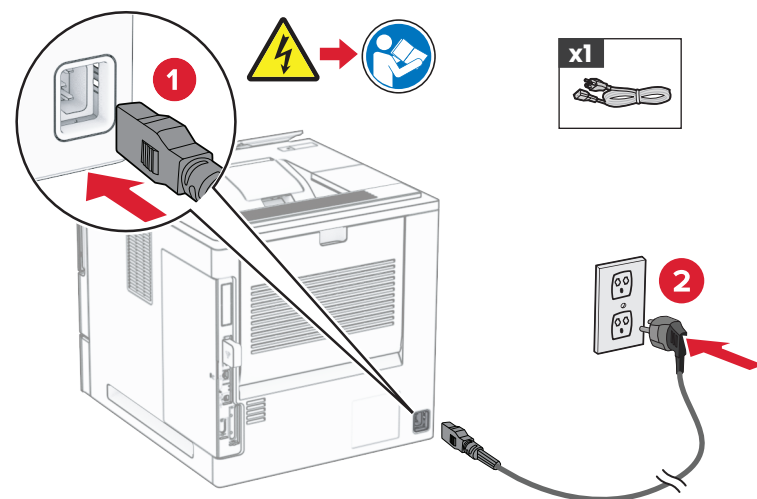




14

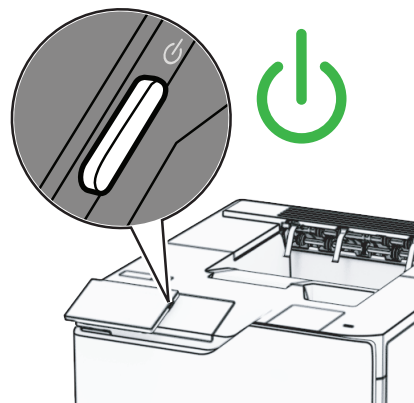

15

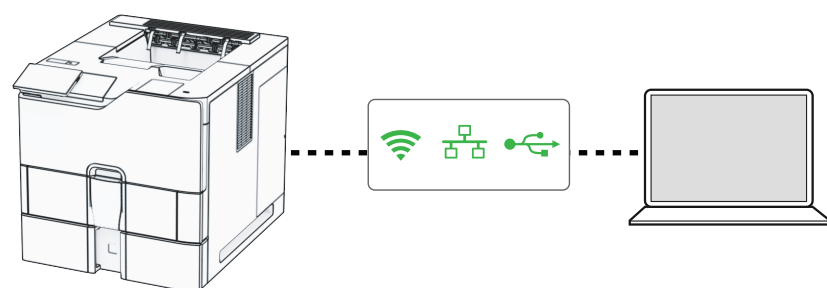


Xerox® MS730 / MS830 Series

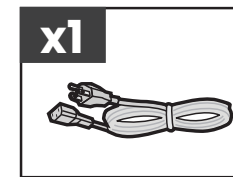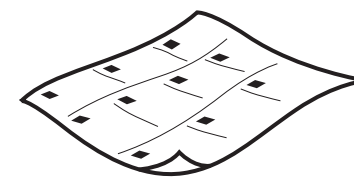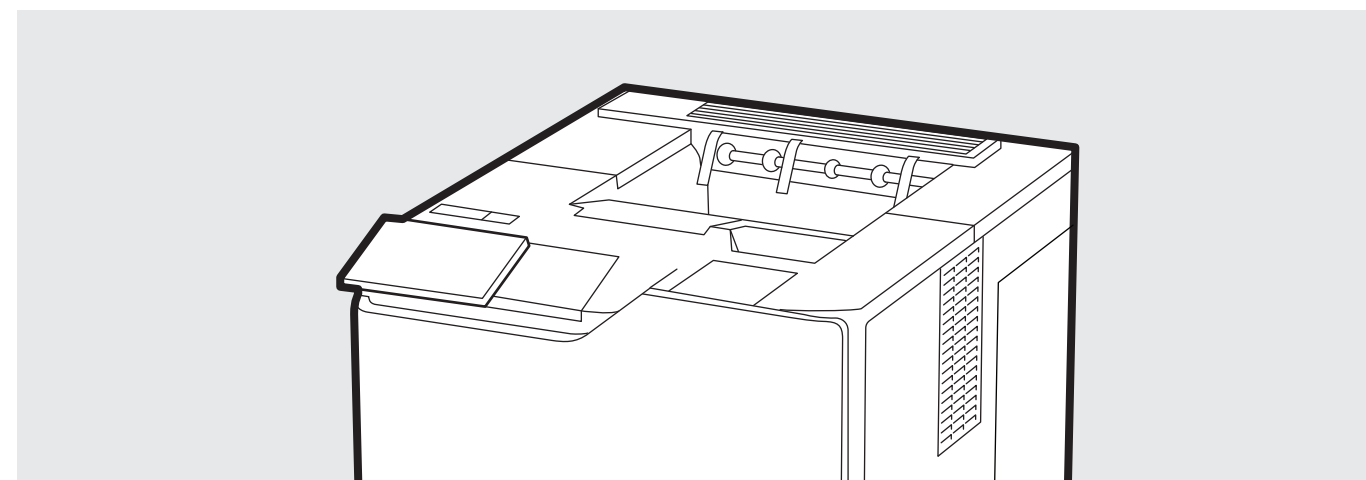




www.xerox.com/AA2026EasyAssistApp


1

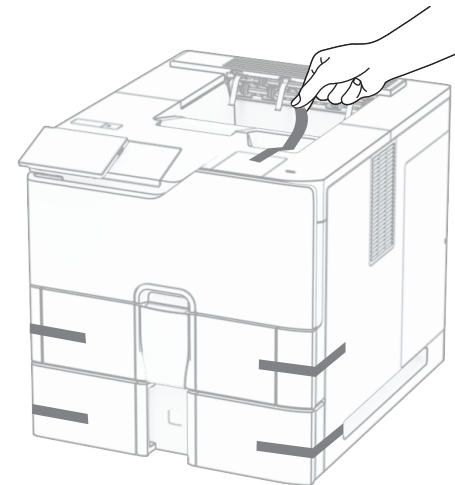


2

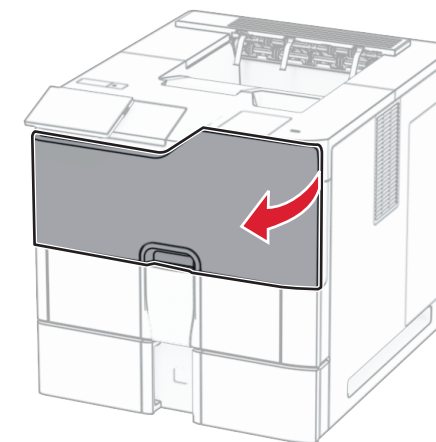


3

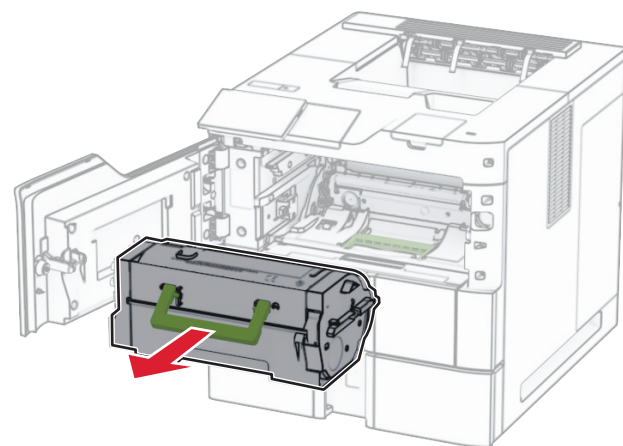


4

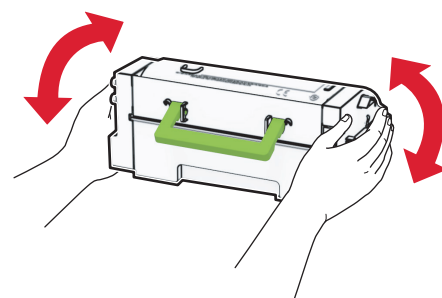


5

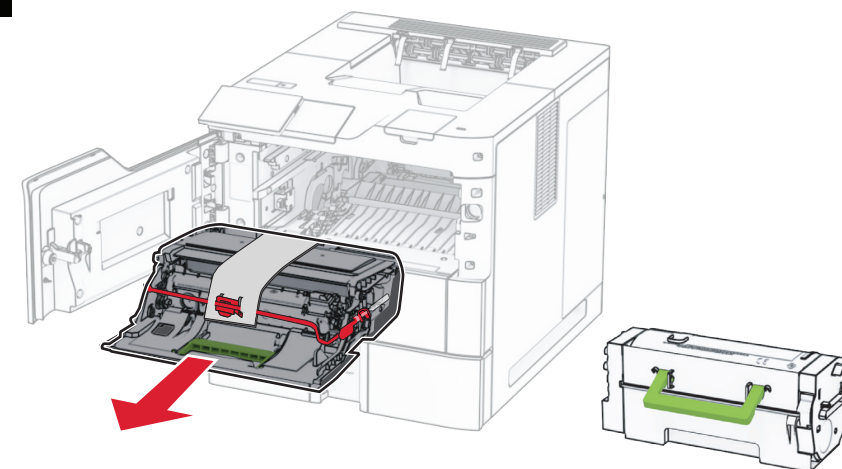


6

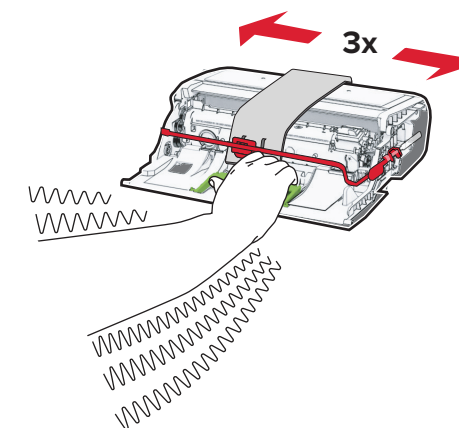

7

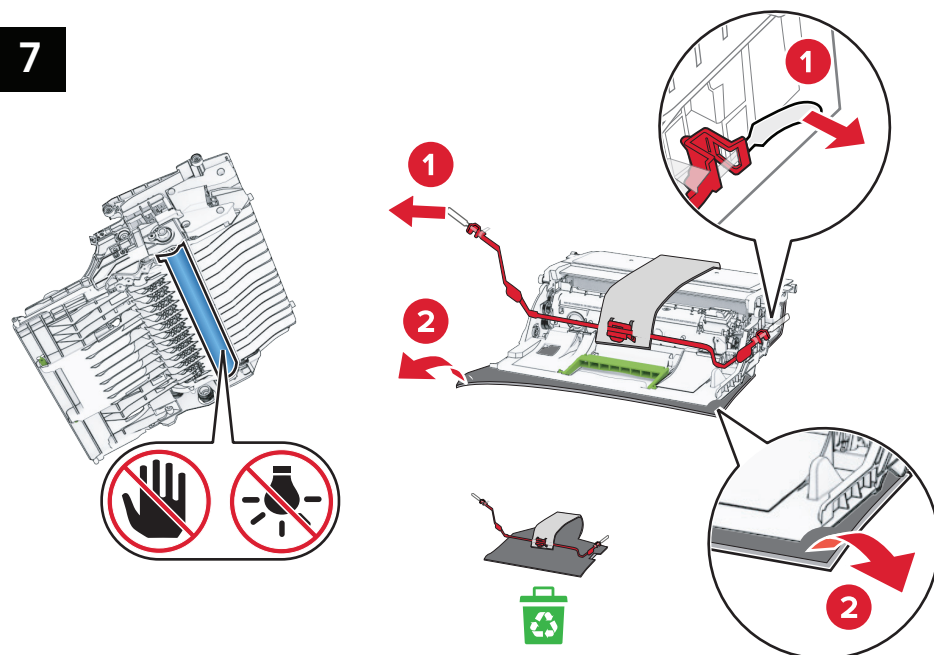

8

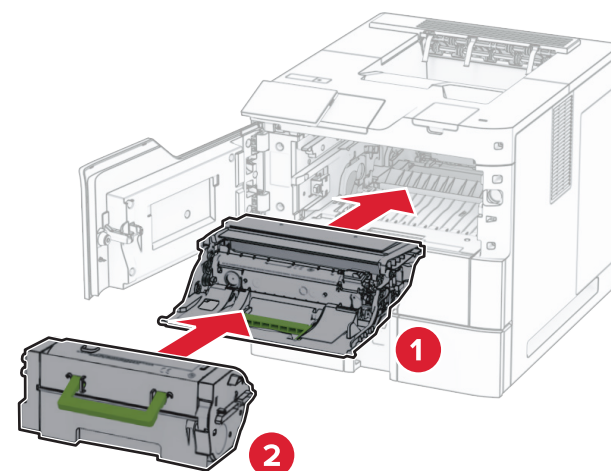

9

