




10

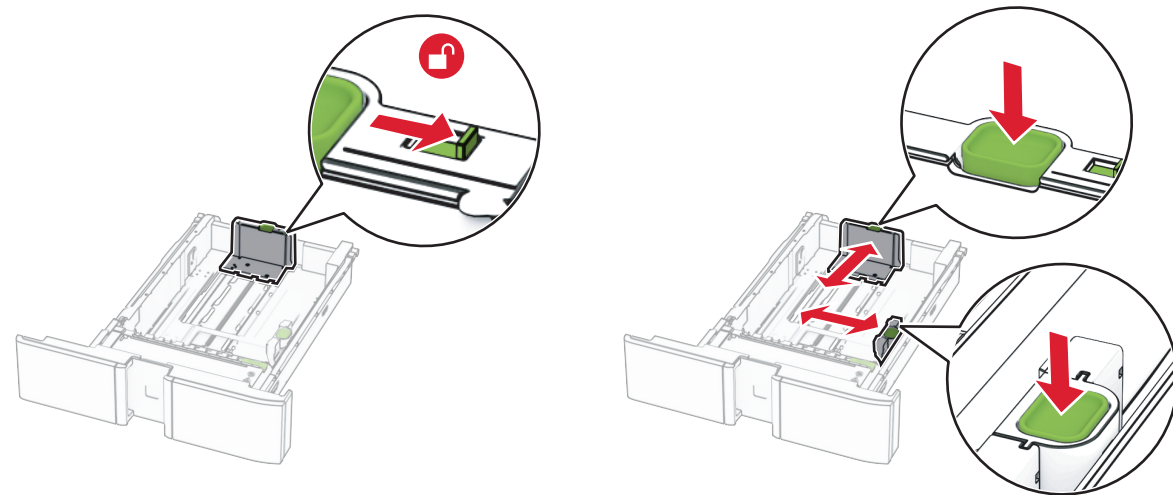


11

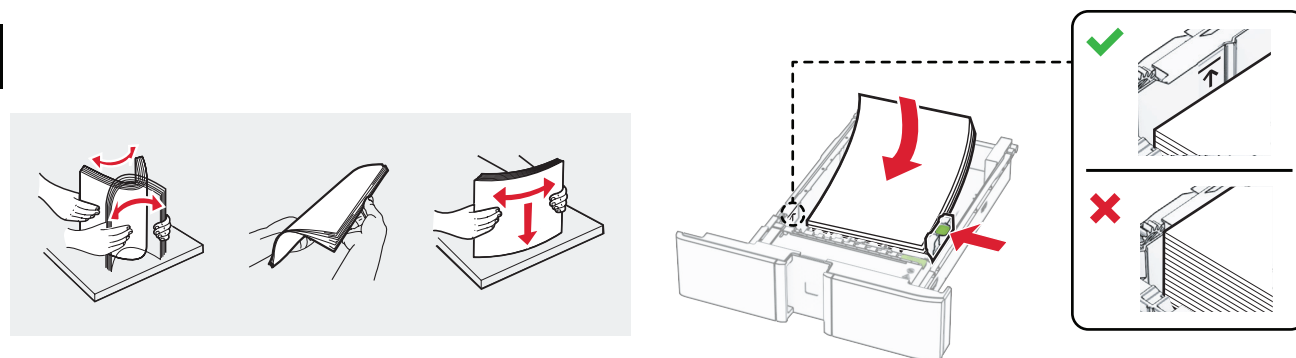


12

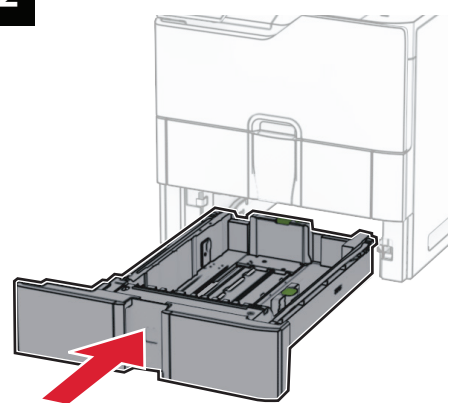


13

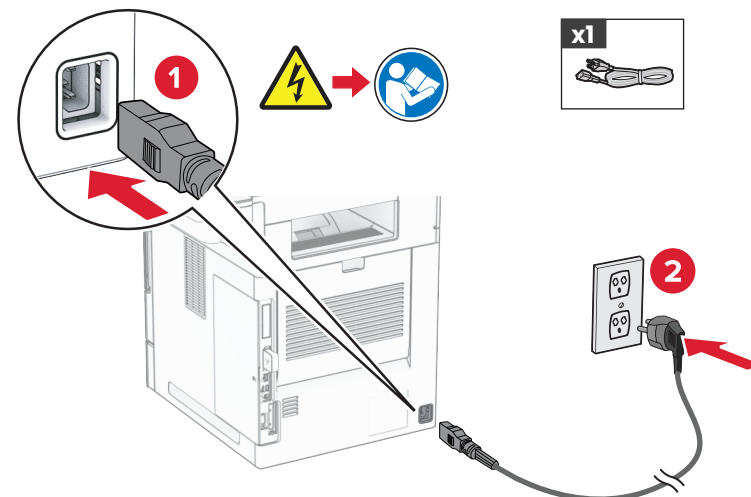



14

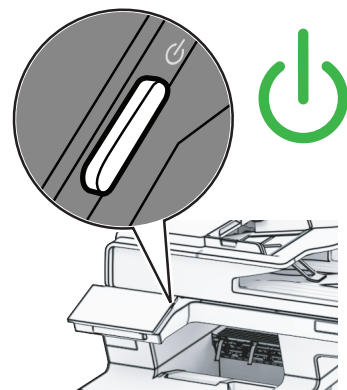

15

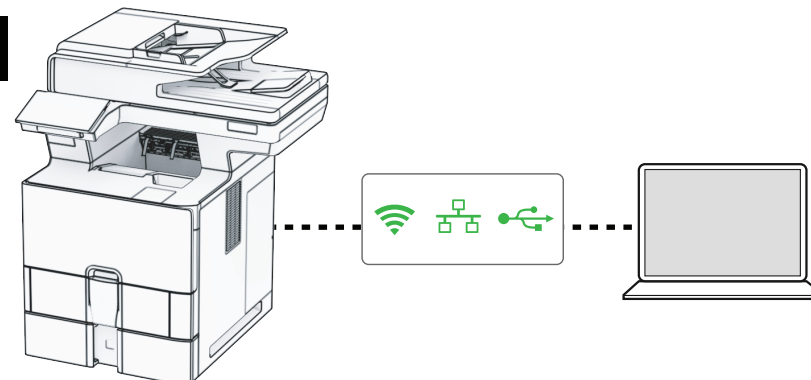



Xerox® MX730 Series

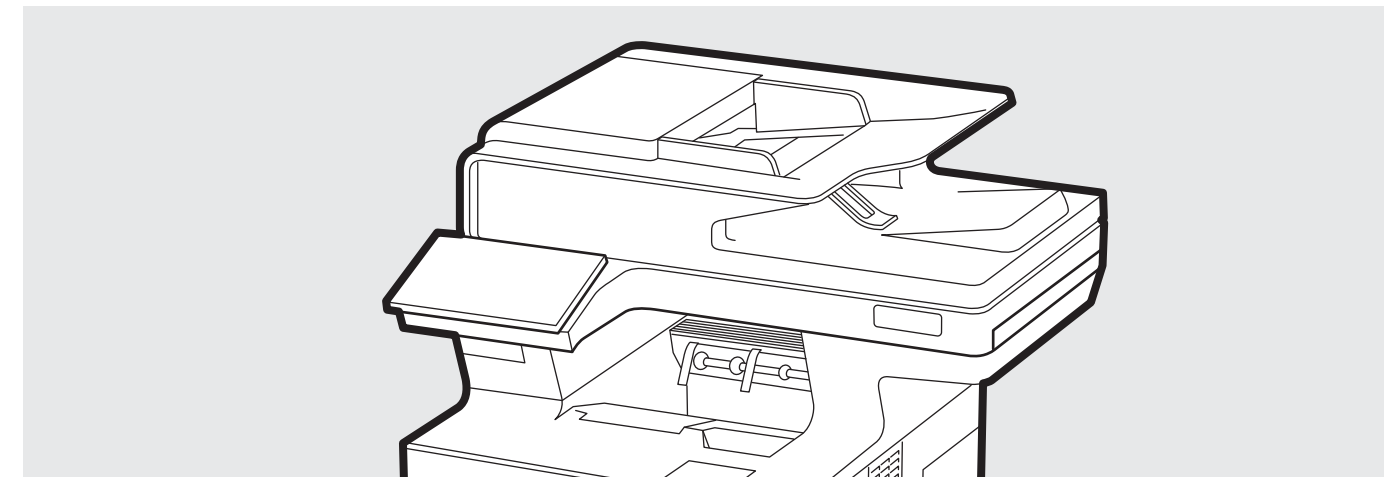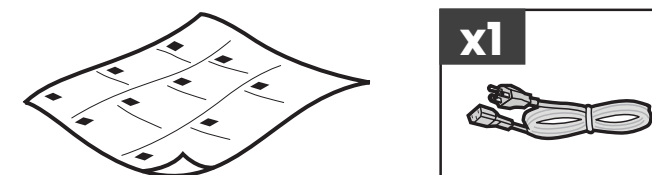




[www.xerox.com/
BB2026EasyAssistApp](http://www.xerox.com/BB2026EasyAssistApp)


1

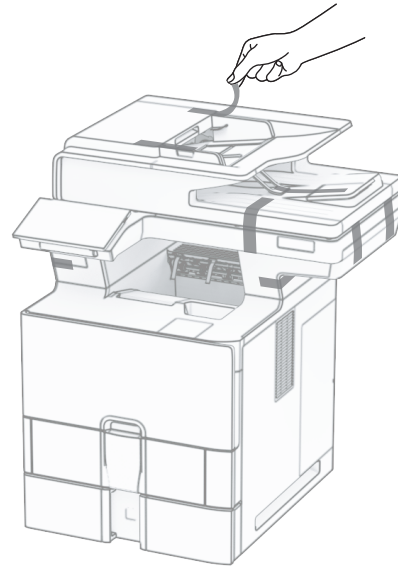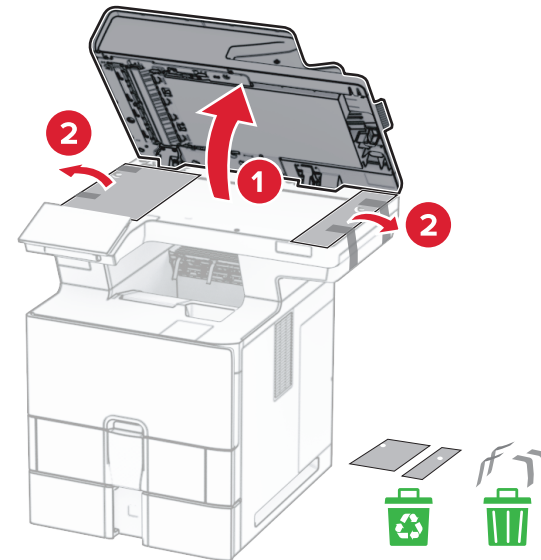


2

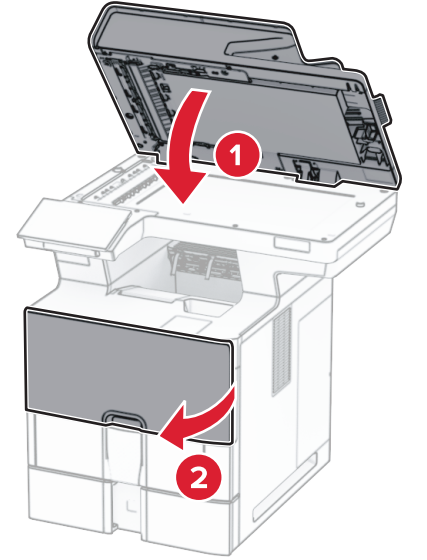


3

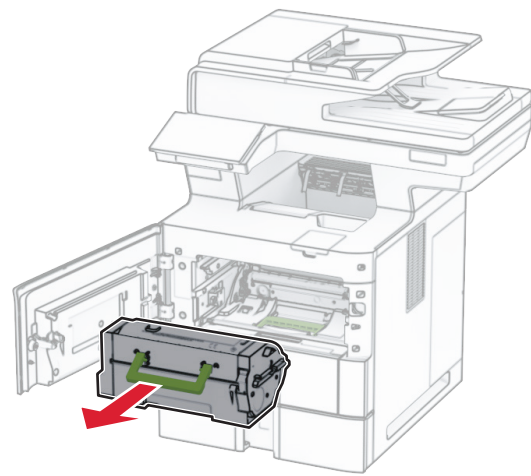


4

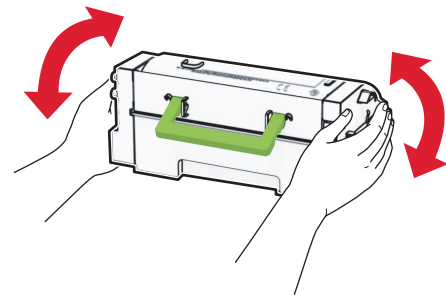


5

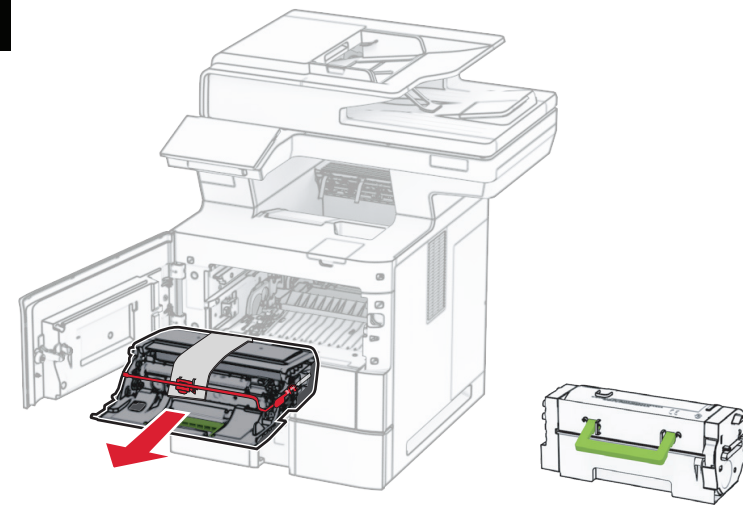


6

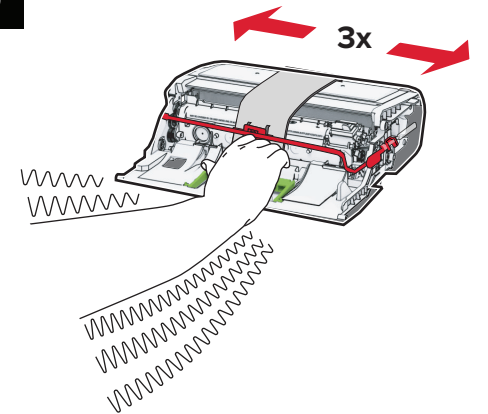

7

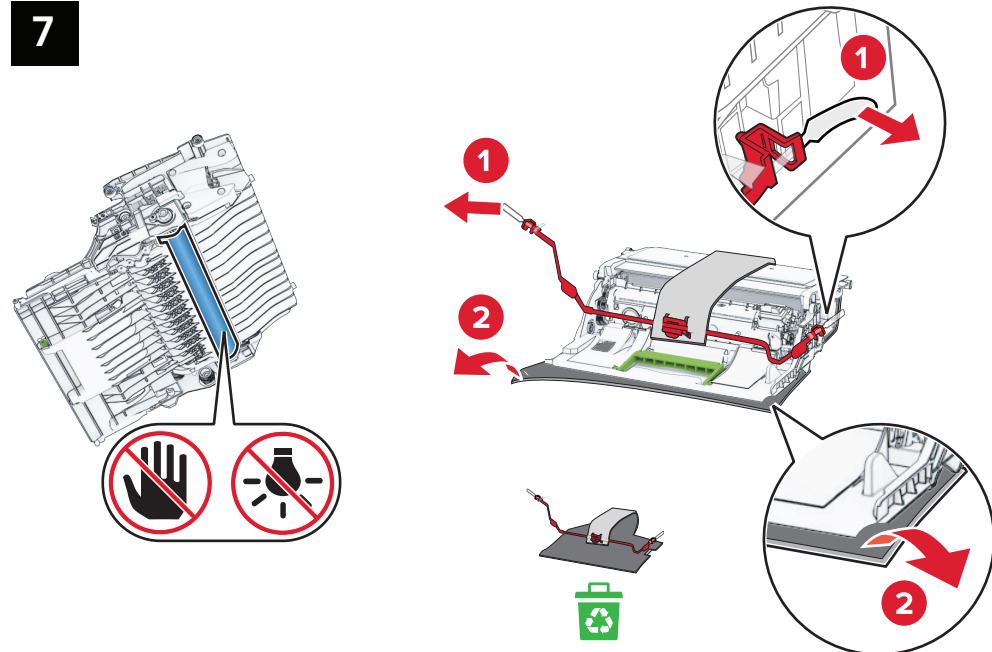

8

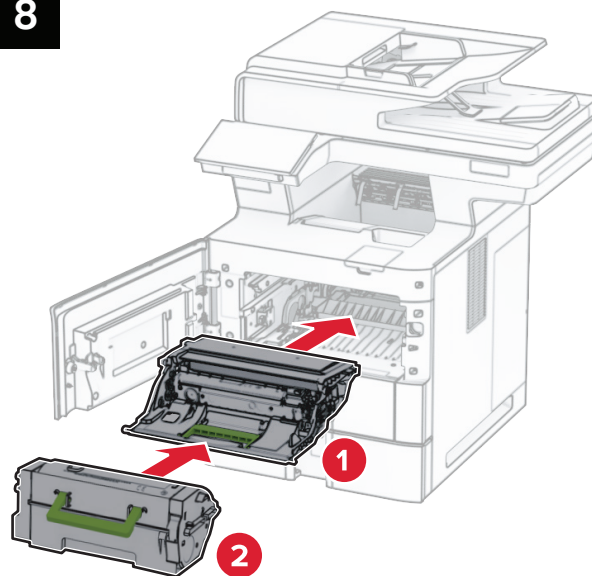

9

