




9

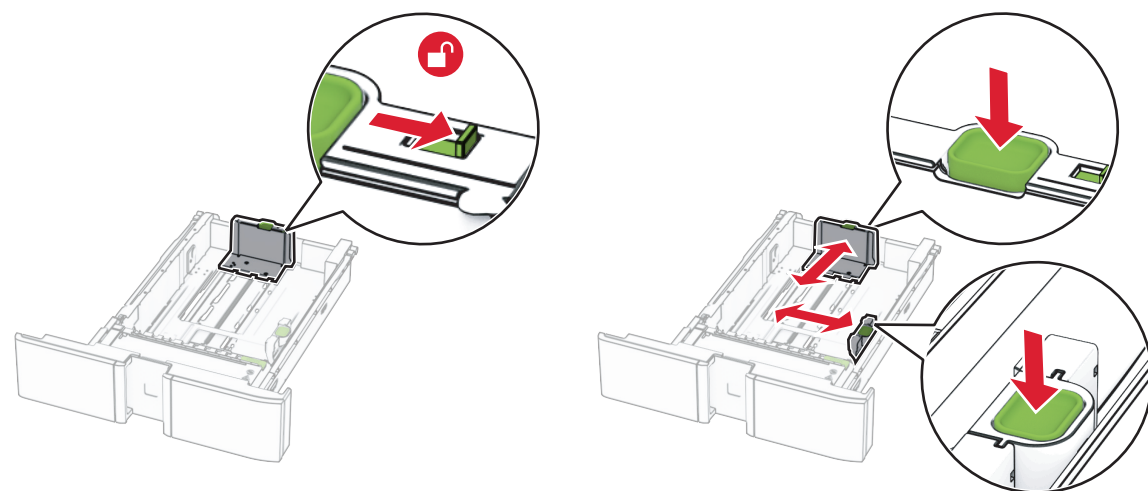


10

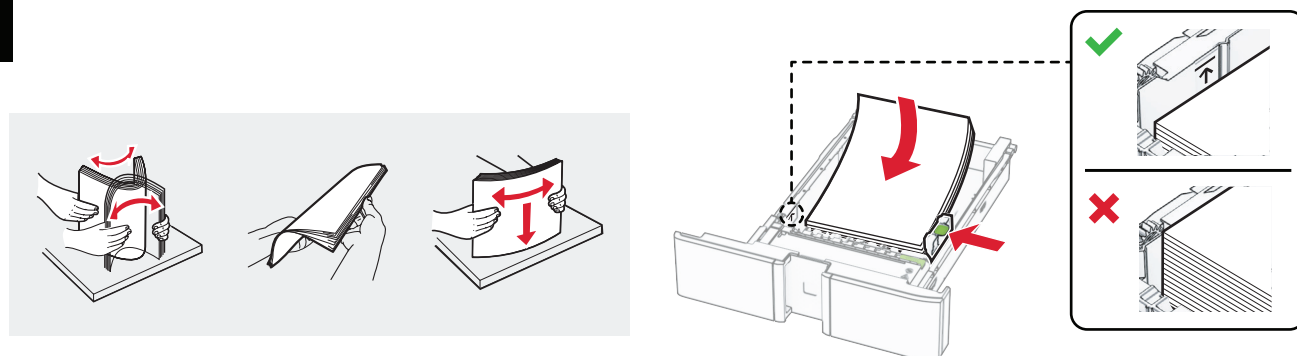


11

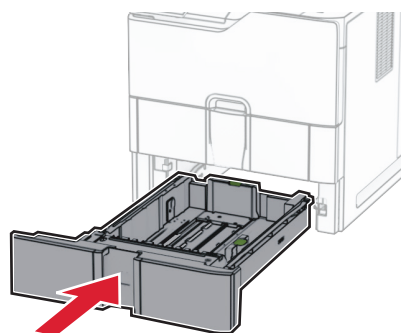


12

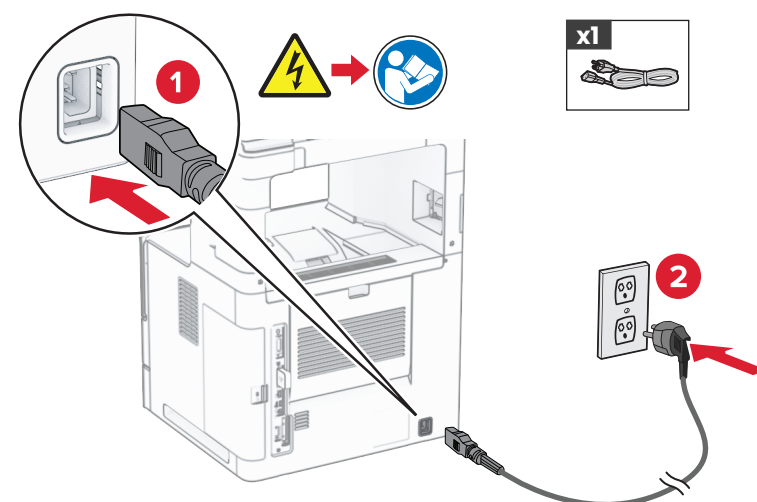


13

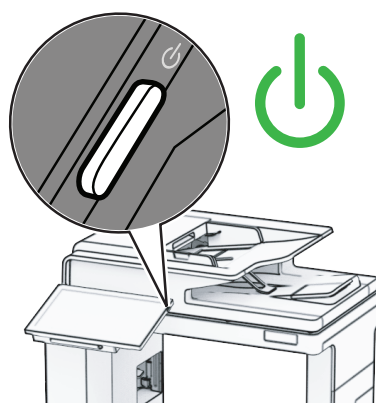

14

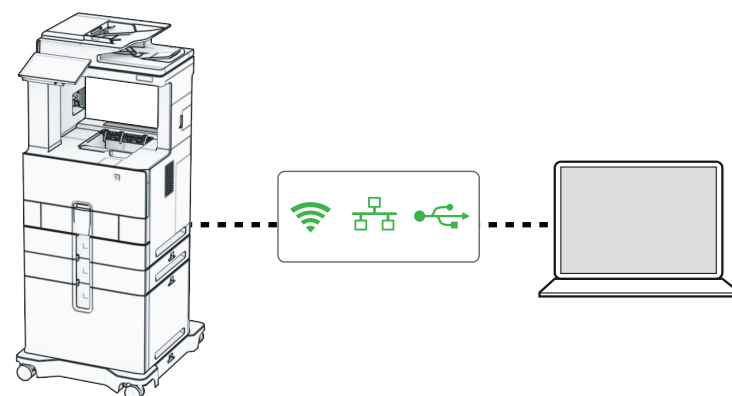




Xerox® MX830 Series

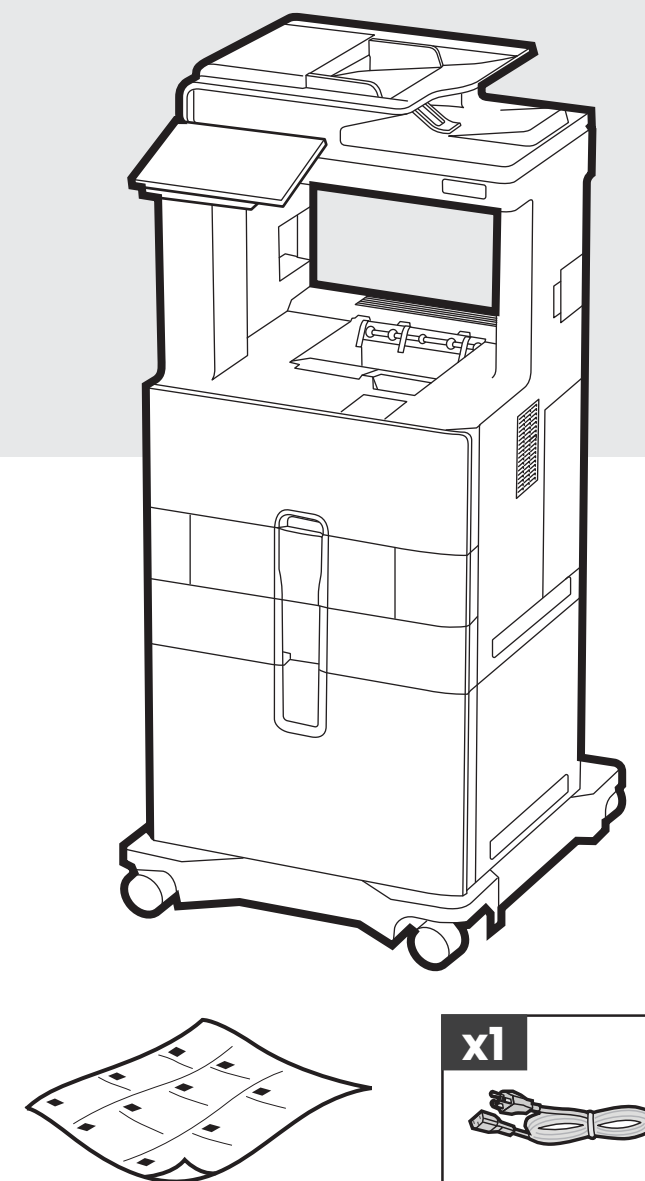





www.xerox.com/CC2026EasyAssistApp


1

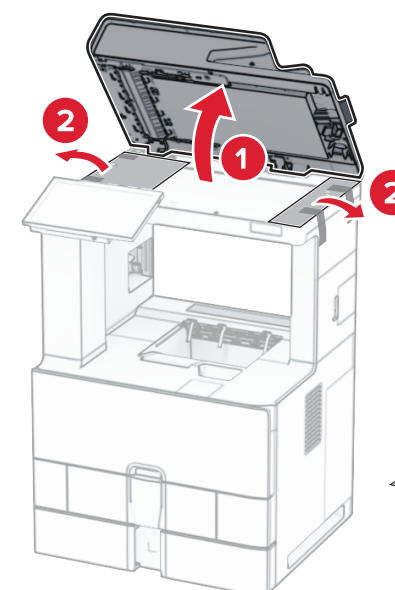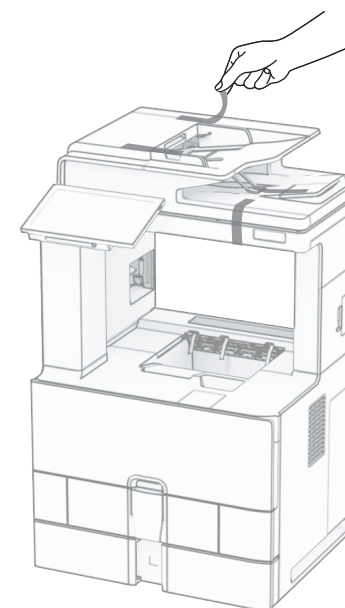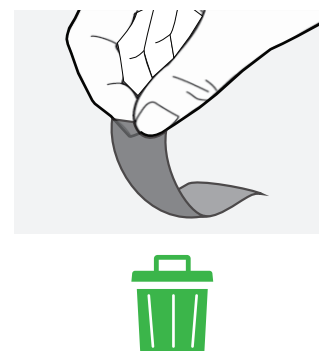


2

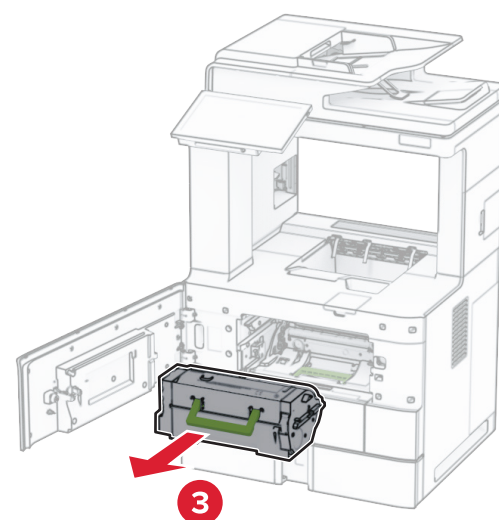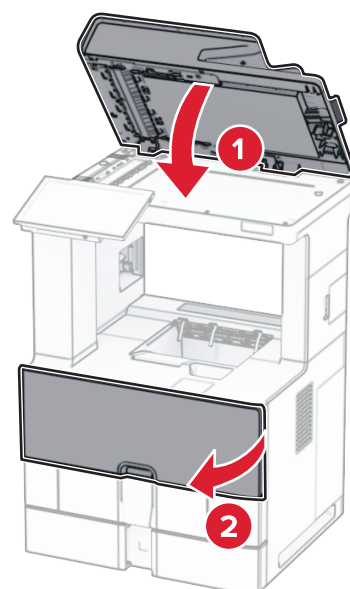


3

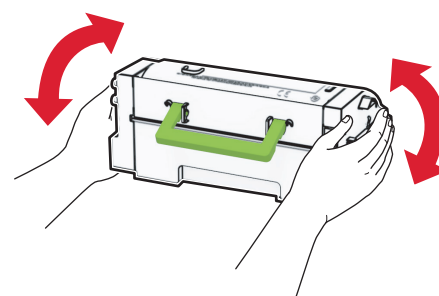


4

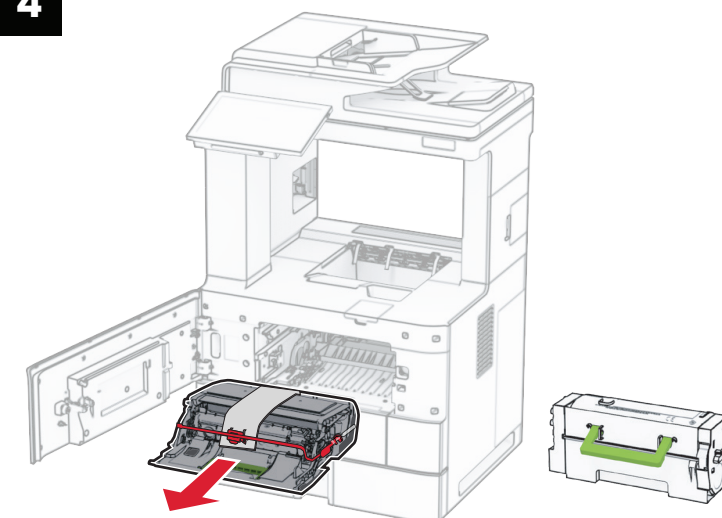


5

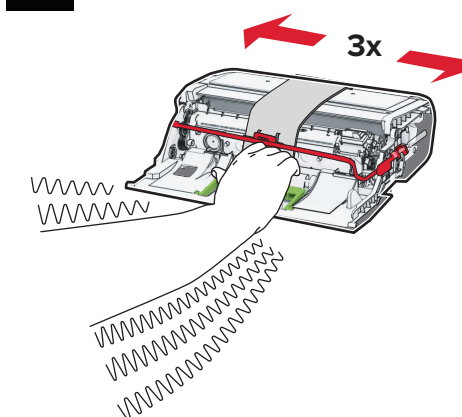

6

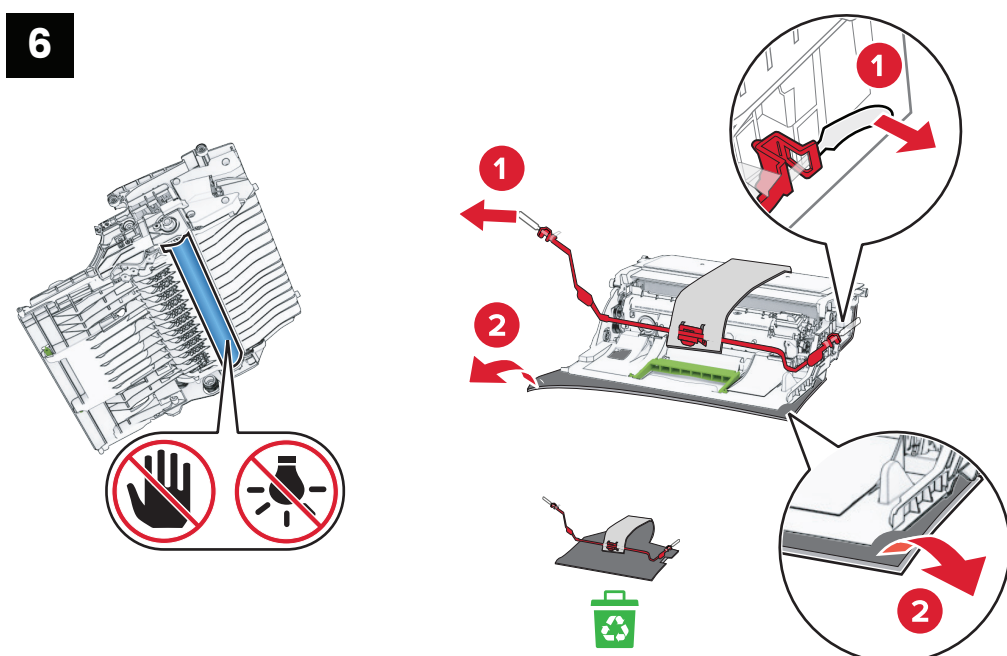

7

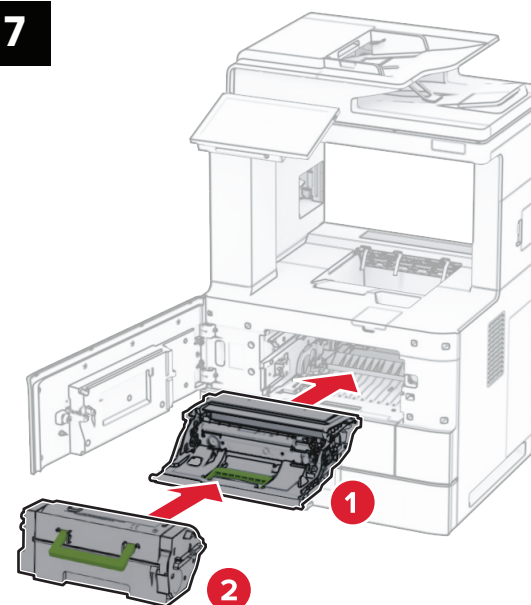

8

