






SCAN TO WATCH THE VIDEO

MS911 Clearing Jams

Note: Make sure to follow the steps as shown.



1 START HERE Check door C first before opening any trays

1.1

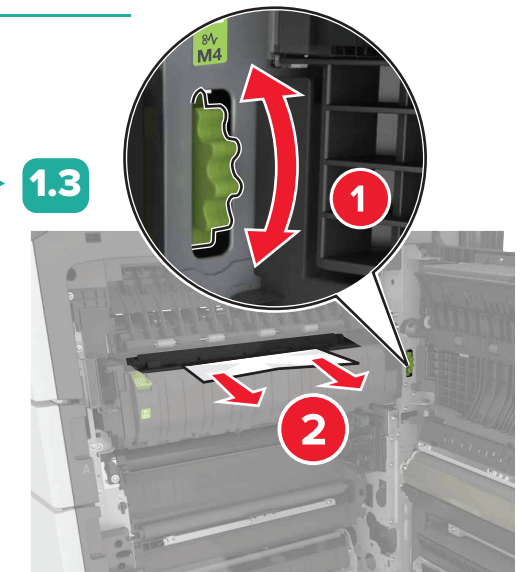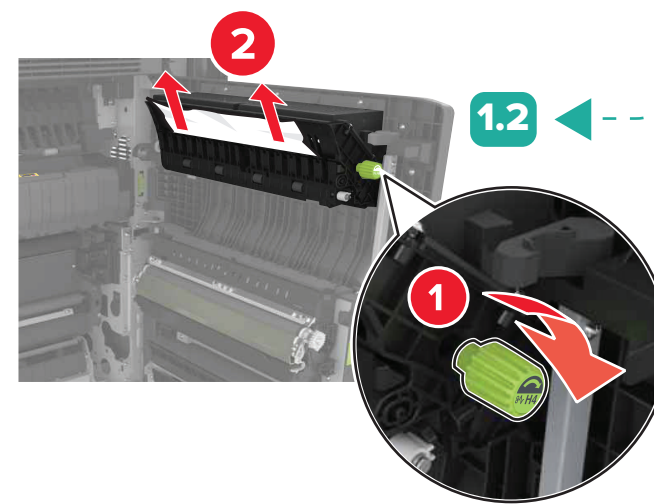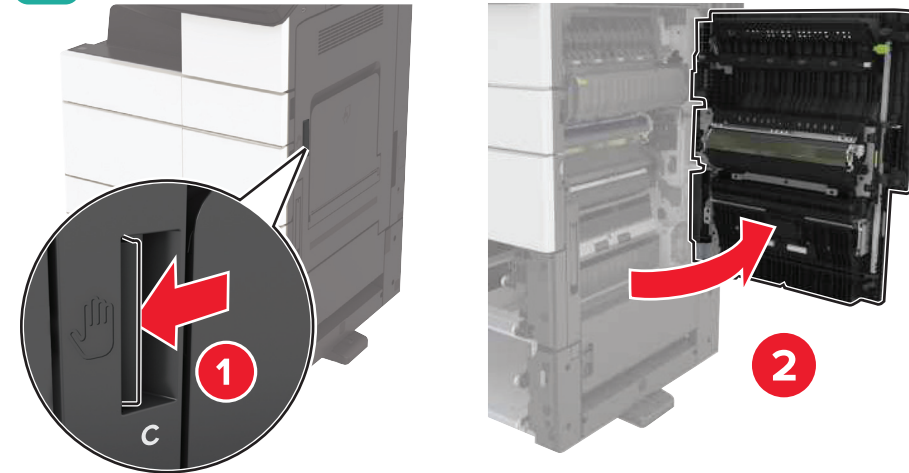


1.4

1.5

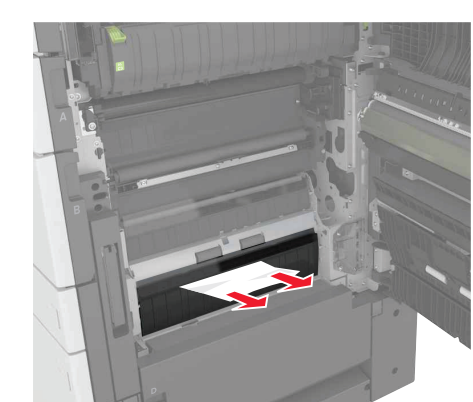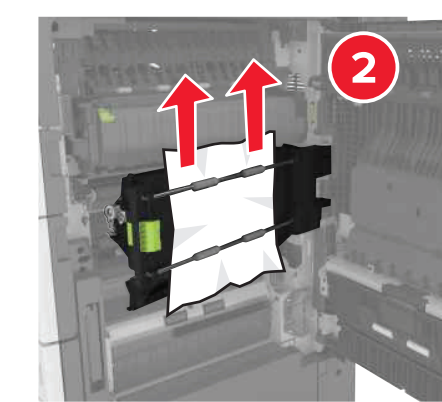

3 Check trays last

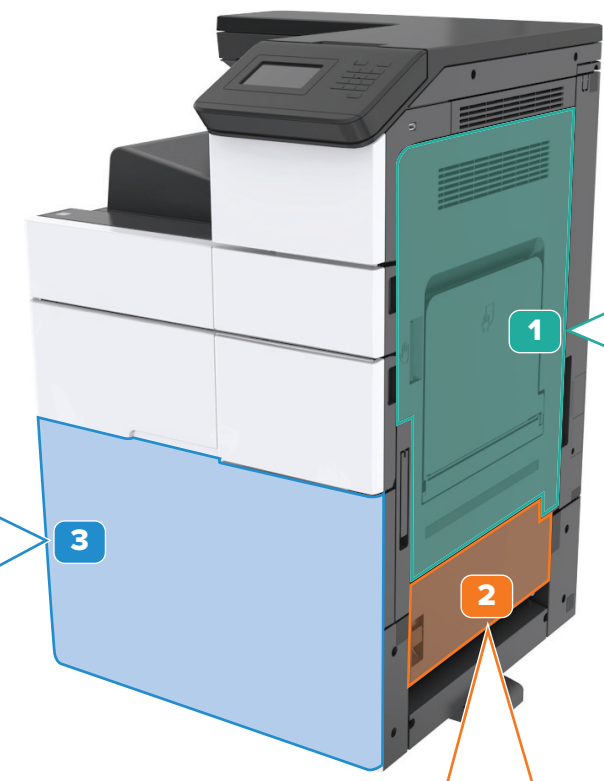

2 Check here next

